



EasyLog XL

Quick Start

For more information and other documentation visit www.4next.eu or scan the QR code on the side



1. Cabling and connection

The wiring and installation of EasyLogXL are very simple.

This guide briefly illustrates how to make electrical connections and settings for initial access.

1.1 SD Card

EasyLogXL stores the data in a standard "SD card". Insert the SD card with the connectors face toward the silk-screen printed part, as shown in Fig.1. The connector is a push-push type: to insert the card, press it until a click is felt. To remove the SD card, press lightly; by clicking, the card will lift a bit and it can be withdrawn. We always recommend the use of industrial-grade SD cards.



→ Fig.1 SD card insertion

1.2 Serial

If you use the serial port to read data from ModBus RTU devices, connect the RS485 wires as shown in Fig.2.



Fig. 2 RS485 connector ←

1.3 Ethernet



If you are using an Ethernet connection to read data from ModBus TCP devices, insert the jack of the Ethernet cable into the appropriate RJ connector of the EasyLogXL, as shown in Fig.3.

→ Fig.3 Ethernet connector

1.4 Power supply

Connect EasyLogXL to a 10-32Vdc power supply as in Fig.4.

It is recommended to respect polarity.



Fig. 4 Power supply terminal ←

2. Access and configuration

EasyLogXL has an integrated WEB server, therefore it is configured using a standard browser. To access the configuration pages, enter the EasyLogXL IP address from the browser of your PC, tablet or smart phone.

2.1 Indirizzo IP di rete

The default IP address of EasyLogXL is **192.168.1.100**.

If your network is of the same IP class: 192.168.1 ..., go to paragraph 2.3, otherwise follow the instructions from point 2.2 to set the correct IP address.

To identify the IP class of your network, run the IPCONFIG command from the command prompt.

In Fig.5, the IP address of the PC is 192.168.1.5. It belongs to the same class / network as EasyLogXL, since the firsts 3 numbers (192, 168 and 1) are the same. It is therefore possible to reach EasyLogXL from the PC browser.

If the network is NOT in the 192.168.1 class, you can proceed in 2 ways:

1. Set up EasyLogXL to work in DHCP (see paragraph 2.2);
2. Set a valid IP on EasyLogXL (see chapter 5 EasyLogXL manual available on the website www.4next.eu)

2.2 DHCP settings

To set up DHCP set DIP SWITCH in the following way: 1 =ON 2 =OFF

Possible configuration set up

DIP-SWITCH 1	DIP-SWITCH 2	Meaning
OFF	OFF	<i>It uses the previously saved configuration. Original configuration is 192.168.1.100.</i>
ON	OFF	<i>It activates DHCP and ignores saved configuration.</i>
OFF	ON	<i>It uses fixed IP 192.168.1.100 and ignores saved configuration.</i>

Connect EasyLogXL to the LAN via an Ethernet cable (Par. 1.3) and power it (Par. 1.4). When the Status LED flashes at regular intervals, EasyLogXL is ready for using.

At this point you can proceed in 2 ways:

- a. by determining the IP address via a network discovery software (e.g. Advanced IP Scanner or Free IP Scanner). Then enter the address found on the browser.
- b. type <http://easylog.local> in the browser. Thanks to the dDNS protocol, EasyLogXL will respond to the request allowing the user to access the configuration pages without knowing the exact IP. This option is available if the Bonjour service or other dDNS service (generally present) are available on the PC from which you access.

N.B. Use this option by connecting one EasyLogXL at most in the same LAN.

2.3 Login and authentication

Once the IP address has been defined, type it in the browser. This will allow you to access the EasyLogXL configuration and consultation pages.

The first screen (Fig.7) is the authentication page with username and password.

The default values are:

User name: **admin**

Password: **admin.**

Fig.5 IP address verification on your PC

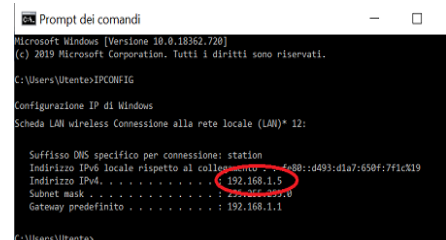


Fig. 6 Example DIP-SWITCH OFF OFF position

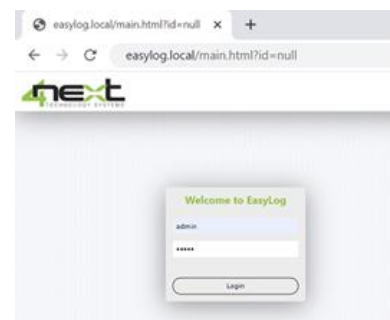


Fig.7 Login mask from PC browser ←